



DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

I PARTS

- | | |
|--|---|
| <p>A. Blend Center Assembly</p> <p>B. Vinyl Outlet Tubing</p> <p>C. 1 pc. Label Card</p> | <p>D. Vinyl Tubing, Foot Valve, and Ceramic Weight</p> <p>E. 2 pcs. #8 Pan Head, 1 3/4" Long Mounting Screws & Anchors</p> <p>F. Metering Tip Kit</p> |
|--|---|

II INSTALLATION:

<p>This product is designed only to be used as described in this instruction sheet. Adhere to all warnings and cautions identified in this document.</p>	
	<p>WARNING: Installations must conform to all local and national plumbing codes and use approved backflow prevention and pressure relief devices where required.</p> <p>ALWAYS DISCONNECT DISPENSER FROM WATER SOURCE WHEN DISPENSER IS NOT IN USE.</p>
	<p>Always read SDS for all chemicals used and follow personal protective guidelines.</p>

A. Mounting and water supply:

Remove the cover retaining screws and the cover from the blend center assembly. Mount the unit in position on the wall and locate the position for the two screws in the outer most holes in the valve bodies. Mount the unit to the wall and replace the cover and screws. The water inlet is equipped with a female garden hose fitting (with strainer washer) for attaching a water supply hose. The fitting may be removed to permit direct connection to a 3/8" NPT pipe. The unit is designed so water can be supplied to either side by interchanging the pipe plug and the female hose fitting. Note: Apply pipe dope, hand tighten, and then turn 1 1/2 times with a wrench. **DO NOT OVER TIGHTEN.**

B. Chemical supply:

Place the chemical containers in a convenient location not more than 6 feet below the blend center (greater lifts will reduce injection capabilities). Insert the vinyl supply tubing with the foot valve ends into the chemical containers. Cut the vinyl tubes to any convenient length that will allow them to extend from the bottom of the chemical container to the proportioner inlet barbs. (See Figure 1). Gummed labels are provided for product labeling.

C. Outlet:

Cut the 9/16" I.D. outlet tubing to the desired lengths and attach them to the proportioner outlets. Longer lengths may be used up to 10 feet. The 7' long 3/16" I.D. tubing must be left on the 1 GPM proportioner to insure priming.

D. Chemical injection adjustment: **WARNING: USE CARE WHEN HANDLING HAZARDOUS CHEMICALS.**

Chemical feed rates are controlled by metering tips screwed into the proportioners barbs. Select a tip for each barb using Tables 1 and 2 as a guide. **Note: 1 cps (centipoise) is equal to the viscosity of water, 75 cps is approximately equal to the viscosity of 10 weight motor oil, and 200 cps is approximately equal to the viscosity of most dishwashing detergents.**

DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

III OPERATION

The Blend Center is now ready for use. Depressing a push button opens the valve, allowing water to flow through the chemical proportioner that mixes chemical at the desired rate. The buttons are spring loaded to prevent accidental overflow if unattended but may be converted to locking buttons by cutting off the tab at the notch. (See Figure 2). Pushing the button and turning it 1/4 turn clockwise at the end of its travel allows the valve to lock on. This makes it unnecessary for the attendant to hold the button in while filling large containers. Turning the button in a counterclockwise direction will release it, allowing the valve to shut off.

IV SERVICING: CAUTION: TURN OFF WATER SUPPLY BEFORE SERVICING.

A. Proportioner fails to draw chemical:

1. Proportioner outlet tubing is cut too short for priming. Pinch outlet tube to create back pressure which will cause unit to prime. The foot valve will keep the inlet tube primed thereafter.
2. Insufficient water supply pressure. 20 PSI is the minimum allowable.

B. Proportioner stops drawing chemical:

1. Inspect foot valve for dried chemical or dirt. Soak in hot water to clean.
2. Proportioner metering tip clogged with dried chemical. Remove tip and try injecting hot water to clear interior passages.

C. Proportioner continues to draw chemical after water valve closes:

Chemical supply is higher than bottom of discharge tube creating a natural siphon. Lower the chemical supply or hang up outlet tubing after use.

D. Valve malfunction:

Check that the button moves freely up & down and that a "click" can be heard when the button is pushed and released, indicating that the magnet is activating the plunger properly. Remove cover. To inspect internal parts, unscrew magnet housing and carefully pull off the enclosing tube so as not to drop the plunger, kick-off spring, and spacer. Check for dirt or damage impeding plunger and kick-off spring movement. Inspect the diaphragm, making sure the two small pin holes (bleed holes) in the diaphragm convolution are clear to allow the valve to close.

CAUTION: When servicing unit, be sure that replacement parts have been installed according to drawing.

Table 1 - 164BAG (1 GPM FLOW RATE PROPORTIONER – ¼" BARB AND TUBING)

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Tan	1.25	102 : 1	0.90	142 : 1	0.60	213 : 1
Orange	1.70	75 : 1	1.20	107 : 1	0.80	160 : 1
Turquoise	2.15	60 : 1	1.55	83 : 1	1.10	116 : 1
Pink	3.00	43 : 1	2.00	64 : 1	1.50	85 : 1
Clear	3.90	33 : 1	2.75	47 : 1	1.80	71 : 1
Brown	4.55	28 : 1	3.00	43 : 1	2.00	64 : 1
Red	5.80	22 : 1	3.60	36 : 1	2.30	56 : 1
White	7.00	18 : 1	4.45	29 : 1	2.70	47 : 1
Green	7.90	16 : 1	5.00	26 : 1	3.00	43 : 1
Blue	9.80	13 : 1	5.75	22 : 1	3.30	39 : 1
Yellow	14.80	9 : 1	7.35	17 : 1	3.55	36 : 1
Black	20.15	6 : 1	8.50	15 : 1	3.70	35 : 1
Purple	27.80	5 : 1	9.80	13 : 1	3.80	34 : 1
Gray	31.60	4 : 1	10.50	12 : 1	3.90	33 : 1
No Tip	35.70	3.6 : 1	11.80	11 : 1	4.50	28 : 1

DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

Table 2 - 164AG (1 GPM FLOW RATE PROPORTIONER – 3/8" BARB AND TUBING)

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Clear	1.40	91 : 1	1.00	128 : 1	0.85	151 : 1
Purple	2.15	60 : 1	1.75	73 : 1	1.40	91 : 1
Yellow	4.00	32 : 1	3.25	39 : 1	2.80	46 : 1
Green	6.70	19 : 1	5.40	24 : 1	4.50	28 : 1
Pink	8.70	15 : 1	7.00	18 : 1	5.60	23 : 1
Turquoise	14.15	9 : 1	11.15	11 : 1	8.15	16 : 1
Black	17.25	7 : 1	13.50	9 : 1	10.00	13 : 1
Gray	22.60	6 : 1	16.75	8 : 1	11.60	11 : 1
Red	25.15	5 : 1	19.50	7 : 1	13.50	10 : 1
Blue	27.50	4.7 : 1	21.65	6 : 1	14.25	9 : 1
Brown	31.00	4 : 1	24.25	5 : 1	15.60	8 : 1
White	33.50	3.8 : 1	26.25	4.9 : 1	16.70	7.7 : 1
Orange	35.40	3.6 : 1	28.00	4.6 : 1	17.40	7.4 : 1
Lt. Blue	36.50	3.5 : 1	29.00	4.4 : 1	18.20	7 : 1
Tan	37.80	3.4 : 1	29.90	4.3 : 1	18.65	6.9 : 1
No Tip	38.30	3.3 : 1	30.90	4.1 : 1	21.30	6 : 1

Table 3 - 163BAG (4 GPM FLOW RATE PROPORTIONER – 1/4" BARB AND TUBING)

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Tan	0.30	427 : 1	0.20	640 : 1	0.15	853 : 1
Orange	0.40	320 : 1	0.30	427 : 1	0.25	512 : 1
Turquoise	0.60	213 : 1	0.40	320 : 1	0.30	427 : 1
Pink	0.80	160 : 1	0.50	256 : 1	0.40	320 : 1
Clear	1.00	128 : 1	0.70	183 : 1	0.45	284 : 1
Brown	1.20	107 : 1	0.80	160 : 1	0.50	256 : 1
Red	1.50	85 : 1	0.90	142 : 1	0.60	213 : 1
White	1.85	69 : 1	1.10	116 : 1	0.70	183 : 1
Green	2.00	64 : 1	1.25	102 : 1	0.80	160 : 1
Blue	2.50	1 : 1	1.50	85 : 1	0.82	156 : 1
Yellow	4.00	32 : 1	1.85	69 : 1	0.90	142 : 1
Black	5.50	23 : 1	2.00	64 : 1	0.94	136 : 1
Purple	8.80	15 : 1	2.40	53 : 1	0.96	133 : 1
Gray	11.65	11 : 1	2.50	51 : 1	1.00	128 : 1
No Tip	16.20	8 : 1	3.00	43 : 1	1.20	107 : 1

DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

Table 4 - 163AG (4 GPM FLOW RATE PROPORTIONER – 3/8" BARB AND TUBING)

Metering Tip Color	Injection Rates For Viscosities Shown					
	1 cps		75 cps		200 cps	
	Oz/Gal	Ratio	Oz/Gal	Ratio	Oz/Gal	Ratio
Clear	0.90	142 : 1	0.30	427 : 1	0.20	640 : 1
Purple	1.10	116 : 1	0.50	256 : 1	0.40	320 : 1
Yellow	1.80	71 : 1	1.00	128 : 1	0.70	183 : 1
Green	2.50	51 : 1	1.50	85 : 1	1.20	107 : 1
Pink	3.00	43 : 1	2.00	64 : 1	1.50	85 : 1
Turquoise	4.50	28 : 1	3.15	41 : 1	2.30	56 : 1
Black	4.80	27 : 1	3.75	34 : 1	2.80	46 : 1
Gray	6.70	19 : 1	4.80	27 : 1	3.35	38 : 1
Red	8.15	16 : 1	5.80	22 : 1	3.80	34 : 1
Blue	9.20	14 : 1	6.60	19 : 1	4.20	30 : 1
Brown	11.10	12 : 1	7.75	17 : 1	4.70	27 : 1
White	13.20	10 : 1	9.15	14 : 1	5.00	26 : 1
Orange	15.00	9 : 1	10.10	13 : 1	5.30	24 : 1
Lt. Blue	16.70	8 : 1	11.10	12 : 1	5.50	23 : 1
Tan	18.50	7 : 1	11.30	11 : 1	5.80	22 : 1
No Tip	19.40	6.6 : 1	13.00	10 : 1	6.20	21 : 1

Note: All induction rates are based on a water pressure of 40 PSI.

RETURNS: NO MERCHANDISE MAY BE RETURNED FOR CREDIT WITHOUT DEMA'S WRITTEN PERMISSION. RETURN MERCHANDISE AUTHORIZATION NUMBER REQUIRED IN ADVANCE OF RETURN.

WARRANTY: DEMA products are warranted against defective material and workmanship under normal use and service for one year from the date of manufacture. This limited warranty does not apply to any products which have a normal life shorter than one year or failure and damage caused by chemicals, corrosion, improper voltage supply, physical abuse, or misapplication. Rubber and synthetic rubber parts such as "o"- rings, diaphragms, squeeze tubing and gaskets are considered expendable and are not covered under warranty. This warranty is extended only to the original buyer of DEMA products. If products are altered or repaired without prior approval of DEMA, this warranty will be void.

Defective units or parts should be returned to the factory with transportation prepaid. If inspection shows them to be defective, they will be repaired or replaced without charge, F.O.B. factory. DEMA assumes no liability for damages. Return merchandise authorization number, to return units for repair or replacement, must be granted in advance of return.

DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

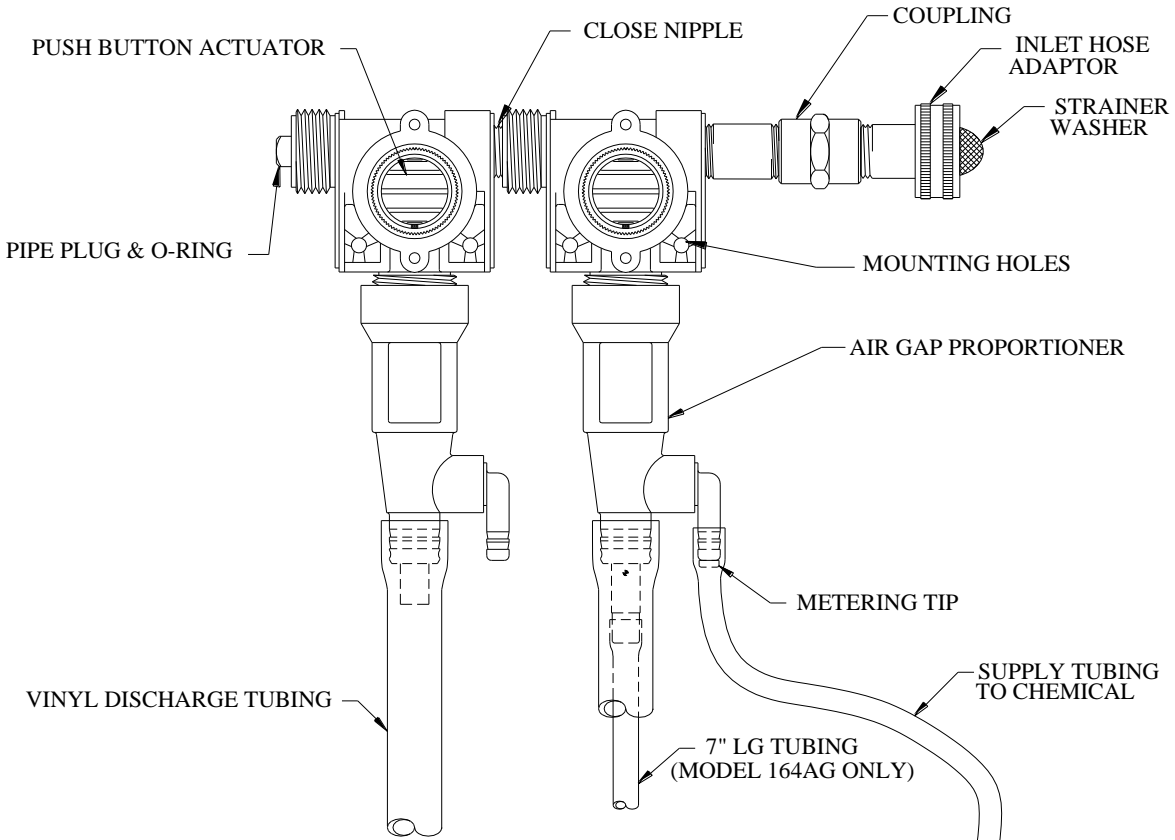


FIGURE 1


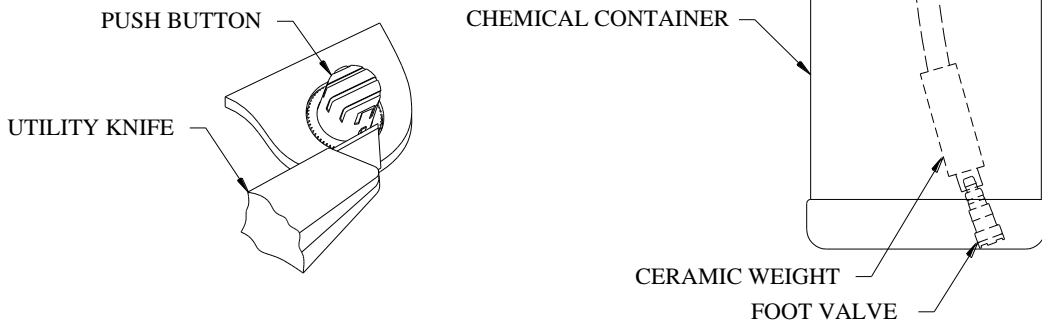


FIGURE 2

ALL INFORMATION CONTAINED IN THIS DOCUMENT IS RELEVANT TO DEMA'S 681 BLEND CENTERS REGARDLESS OF QUANTITIES SHOWN FOR STATION SET UP

DEMA MODEL 681A.2P and 681AG.3P BLEND CENTER INSTALLATION INSTRUCTIONS

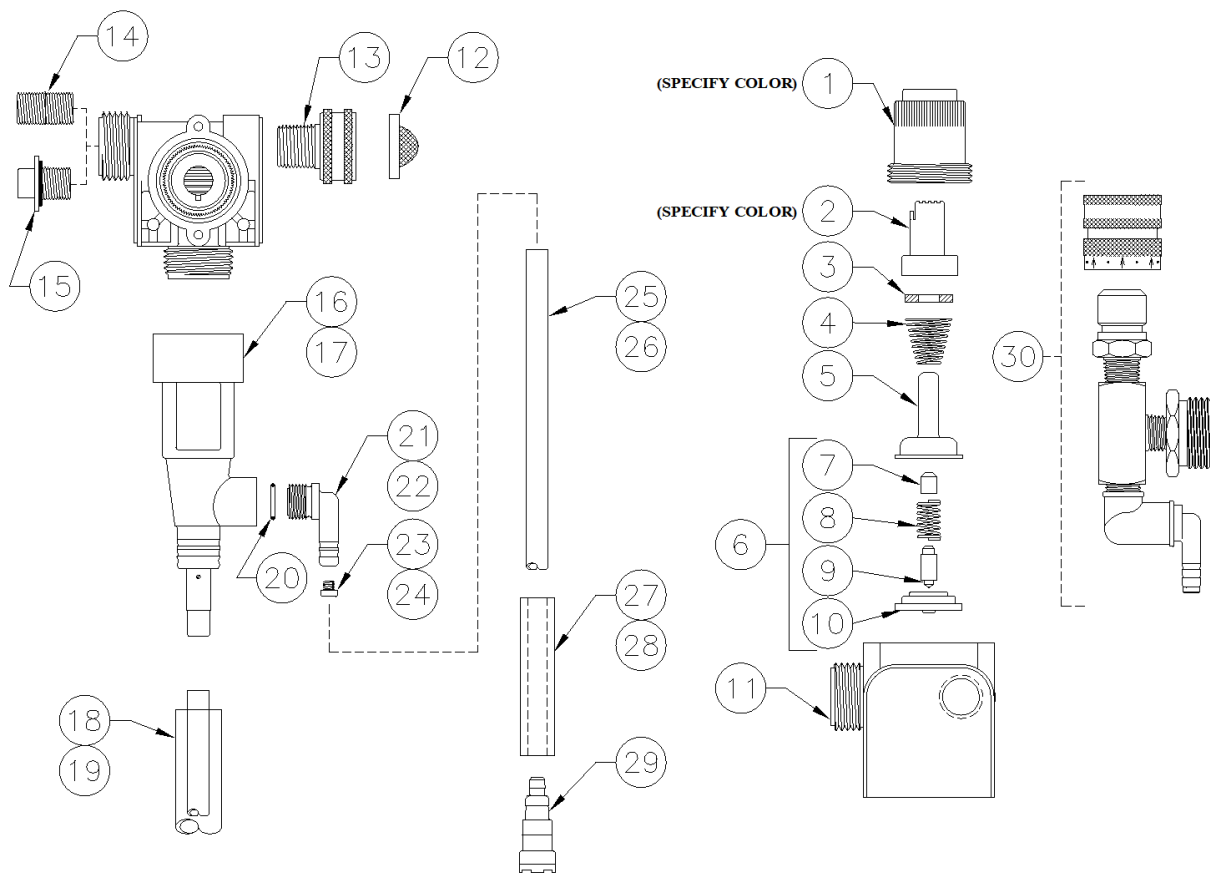

NO.	PART NO.	DESCRIPTION
1	66-139	MAGNET HOUSING
2	66-140	PUSH BUTTON
3	63-35	MAGNET
4	63-36	SPRING
5	41-7-25	ENCLOSING TUBE
6	63-87	VALVE REPAIR KIT
7	63-37	SPACER
8	41-1-8	KICKOFF SPRING
9	63-38	PLUNGER
10	41-15-10	DIAPHRAGM, EP
11	63-39	VALVE BODY
12	100-38	STRAINER WASHER
13	93-44	PIPE TO GARDEN HOSE ADAPTOR
14	66-31	CLOSE NIPPLE
15	66-153	PIPE PLUG ASSY
16	61-22GAP-2	4 GPM PROPORTIONER (WHITE)
17	61-99GAP-2	1 GPM PROPORTIONER (GREEN)

NO.	PART NO	DESCRIPTION
18	61-21	½" ID X 6' LONG VINYL OUTLET TUBE (4 GPM)
19	16-3-6	1/3" ID X 6' LONG VINYL OUTLET TUBE (1 GPM)
20	63-78	O-RING EP
21	63-79	INLET BARB (1/4")
22	63-80	INLET BARB (3/8")
23	100-15K	METERING TIP KIT (1/4" BARB)
24	61-9K	METERING TIP KIT (3/8" BARB)
25	100-12	¼" ID X 8' LONG VINYL SUPPLY TUBING
26	100-12L	3/8" ID X 8' LONG VINYL SUPPLY TUBING
27	61-107-2	CERAMIC WEIGHT FOR ¼" TUBING
28	61-107	CERAMIC WEIGHT FOR 3/8" TUBING
29	100-16E-1	FOOT VALVE
30	68-6-QD2	PRESSURE INDICATING TEE